
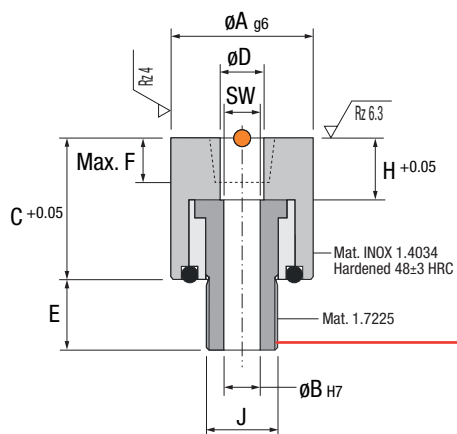


# SPRUE ADJUSTER

ES Desvío Colada DE Angussweiche

IT Deviazione Colata PT Desvio Jito FR Régleurs de Carotte

● Cad Insertion Point

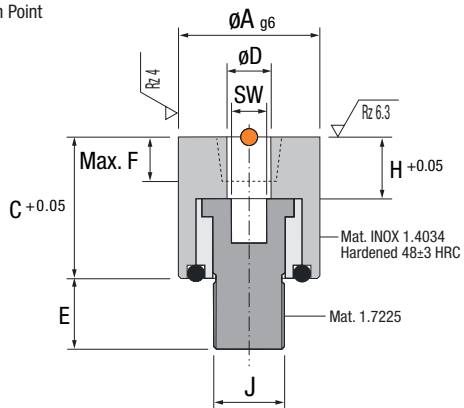

| Ref.      | A  | C  | D   | E  | F  | H    | J   | SW |
|-----------|----|----|-----|----|----|------|-----|----|
| SA.120014 | 12 | 14 | 4.1 | 6  | 3  | 5    | M6  | 3  |
| SA.160016 | 16 | 16 | 5.1 | 8  | 5  | 7    | M8  | 4  |
| SA.200018 | 20 | 18 | 6.1 | 10 | 6  | 9    | M10 | 5  |
| SA.240022 | 24 | 22 | 9.5 | 12 | 10 | 14.5 | M14 | 8  |


| Ref.      | A  | B | C  | D   | E  | F  | H    | J   | SW |
|-----------|----|---|----|-----|----|----|------|-----|----|
| SA.120314 | 12 | 3 | 14 | 4.1 | 6  | 3  | 5    | M6  | 3  |
| SA.160416 | 16 | 4 | 16 | 5.1 | 8  | 5  | 7    | M8  | 4  |
| SA.200518 | 20 | 5 | 18 | 6.1 | 10 | 6  | 9    | M10 | 5  |
| SA.240822 | 24 | 8 | 22 | 9.5 | 12 | 10 | 14.5 | M14 | 8  |

**IMPORTANT !**  
 With ejector bore.  
 Con alojamiento para expulsor.  
 Mit Auswerferbohrung.  
 Con alloggiamento per espulsore.  
 Com alojamiento para extractor.  
 Avec placement pour l'éjecteur.



## Installation Guidelines

Consejos de Instalación · Richtlinien zur Installation · Consigli di Installazione · Instruções de Instalação · Mode d'Installation

### Trapezoidal runner

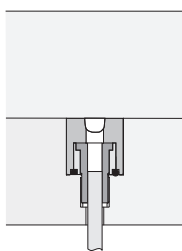


### Full round runner

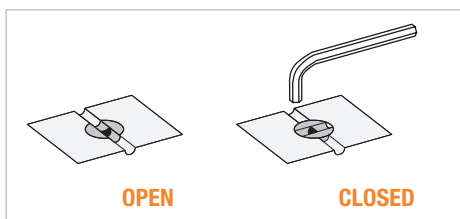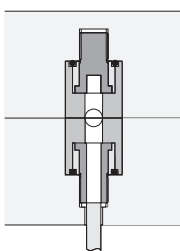

## Possible configurations

Posibles Aplicaciones · Einsatzmöglichkeiten · Possibili Applicazioni · Possíveis Aplicações · Possibilités d'Application

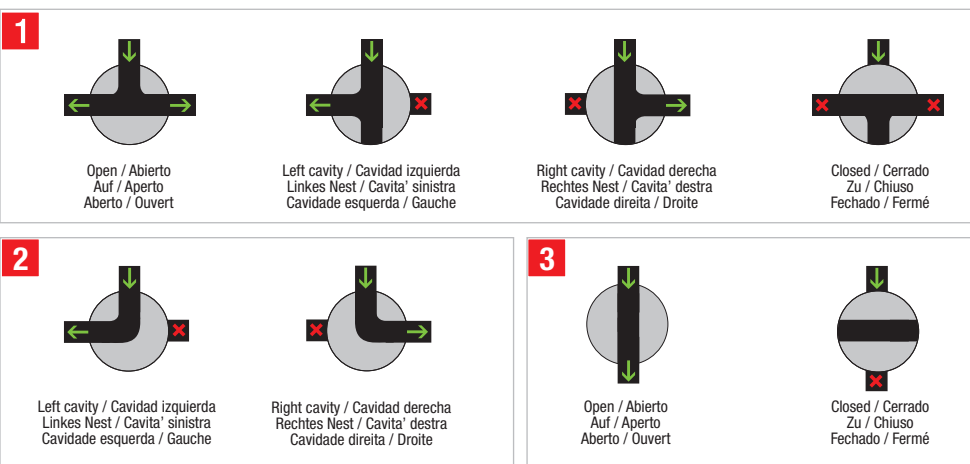

SA

## ACCESSORIES



Patented



Max.  
100°C